



# Disassembling Panasonic Lumix DMC-TZ5

## Back Cover

This is the start to every repair guide, removing the back casing which also contains the LCD Display and back buttons.

Written By: Ben Canfield



## INTRODUCTION

Since this is step one, you will just need to start with your camera.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover



- Remove the battery and memory card from the device.

## Step 2



- Remove 4 screws from the right side of the camera.
  - There are two 3.4mm screws at the top.
  - There are two 2.2mm screws at the bottom.



### Step 3



- Remove the single 3.4mm screw on the left side of the camera.


### Step 4



- Remove 5 screws from the base of the camera.
- There are two 2.2mm screws next to the battery compartment.
- There are three 4mm screws around the tripod mount.




## Step 5

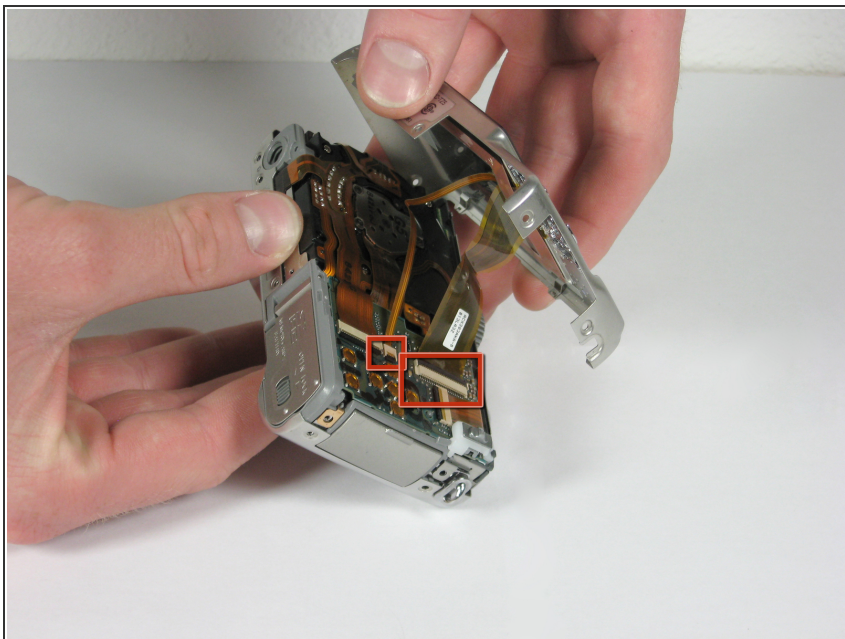


- Slowly slide the back cover away from the device
- ⚠ The back casing is held in place by two ribbon cables. Do not pull the back cover too far from the camera.

## Step 6

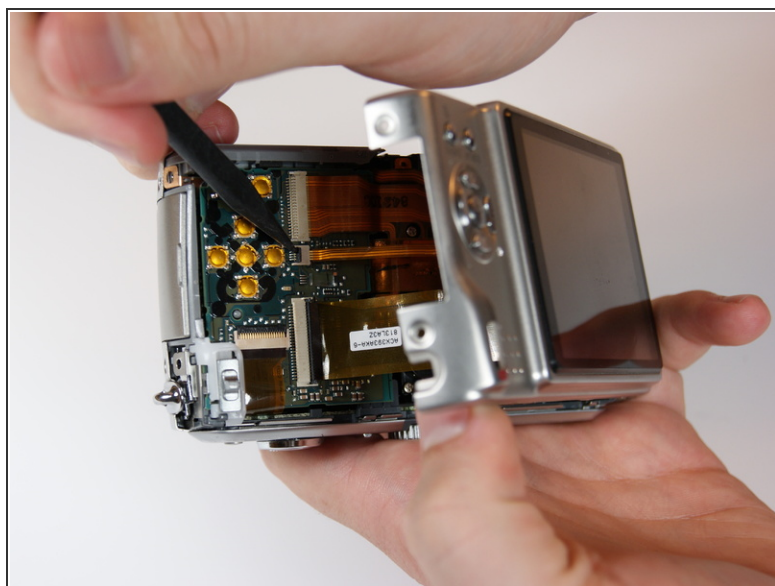

- Detach both ribbon cables using a spudger.
- Use the tip of the spudger to lift the black clip upward, unlocking the ribbon cable.

## Step 7

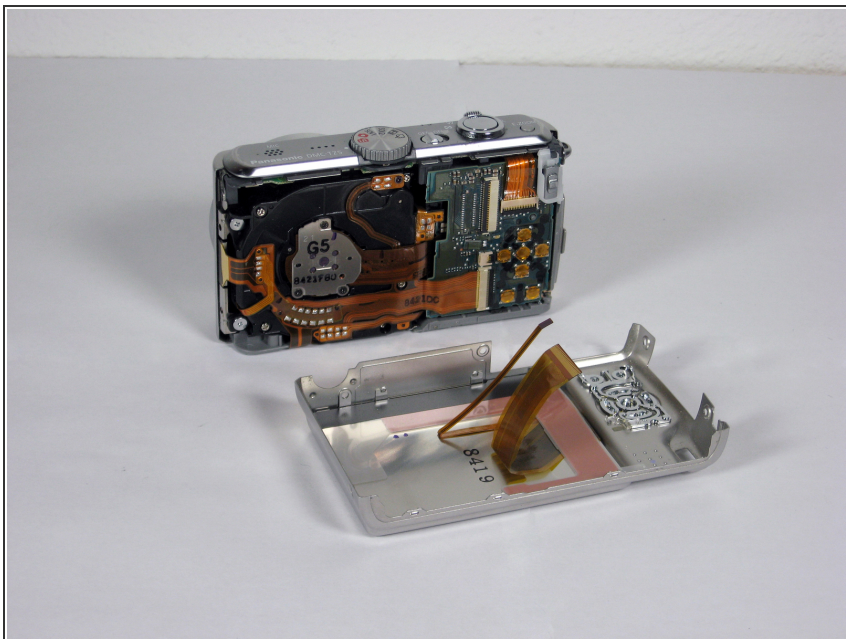

- Remove the back casing from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:15:17 PM.